

11 Add Tags and Configure Cameras

From the Dashboard select the Gear icon and adjust the settings of your camera. Create tags on your cameras to organize them into groups.

12 Enjoy your Video and Ease of Access

You can download our application in the Apple App Store or the Google Play store. Look for "Eagle Eye Viewer".

www.een.com/downloads

Camera Manufacturer Notes

Axis An ONVIF admin account must be created via the camera's web interface or using Axis Camera Tools. Any login to an Axis camera via its web interface will **disable ONVIF**.

Hikvision If Hikvision's illegal lock is enabled, the username and password of the camera must be entered into the Eagle Eye password locker prior to placing the camera on the same network as the bridge or the illegal lock will be activated. We recommend disabling Hikvision's illegal lock on all cameras and connecting to the CamLAN.

Camera Setup: Configure Hikvision cameras using a separate network within the subnet of the camera's default static IP. Check Hikvision documentation for Firmware and default IP address.

Samsung Must be powered on after the bridge is powered on in order to be properly discovered.

Sony The second stream must be enabled to deliver JPEG images for the preview stream.

If one of your cameras is not supported, please request support for it. Click the email icon and fill out the form. You must leave the camera on and bridge powered up until the camera is supported.



Brivo Eagle Eye Bridge Quick Start Guide

The Brivo Eagle Eye Bridge is a smart device that connects to your security cameras, records video, and securely transmits it to the Brivo Eagle Eye Cloud. Access your video and manage your cameras from a web browser or a mobile device. The Brivo Eagle Eye Bridge is physically installed on your network and assigned an IP address.

1 Getting Started

We recommend reading these instructions fully before starting. You will need the following:

- Brivo Eagle Eye Bridge (supplied)
- AC Power Cord (supplied)
- Ethernet Cables (not included)
- AttachID (supplied)

If you require a static IP address on the Bridge, you will also need:

- Monitor
- USB Keyboard

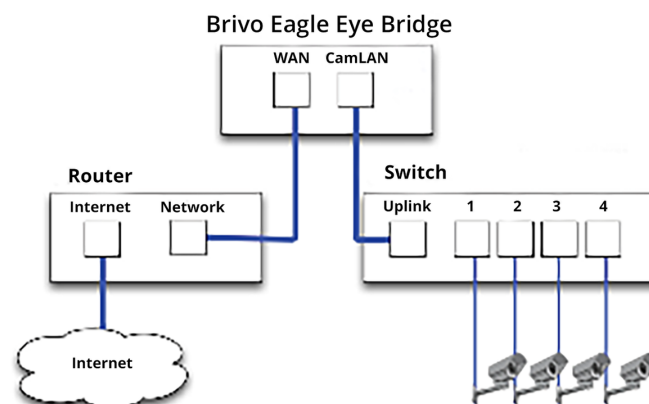


Figure 1 Suggested Connection



For more information about Brivo Eagle Eye hardware
contact us at brivo.com or call us at 866.692.7486

2 Physical Installation

1. Place the Brivo Eagle Eye Bridge in a secure location. Mount it.
2. Connect an Ethernet Cable from your network switch to the WAN port on the back of the Eagle Eye Bridge. Do NOT connect the CamLAN into your local network. The CamLAN is designed for cameras only and serves DHCP.
3. Connect the power cord to the Brivo Eagle Eye Bridge.
4. The Bridge should power up automatically. Pressing the power button will power down the bridge after a few seconds. If the Bridge is powered off, pressing the power button will turn it on.

3 Configure IP Address and Network Settings

By default, the Brivo Eagle Eye Bridge obtains a DHCP address from your network. If you require a static IP address, please follow these instructions:

1. Connect the monitor and keyboard to the Eagle Eye Bridge.
2. Log in to the Administrative Console:

Login: admin

Password: <last five digits of the serial number>

3. Configure the **IP Address, Subnet Mask, Default Gateway, Primary DNS Server** and **Secondary DNS Server** as appropriate for your network.

4 Open Firewall Ports

If your EagleEye Bridge is located behind a highly secure corporate firewall, open the following outbound ports on your firewall:

Port	Direction	TCP	UDP	Usage
80	Out	Yes	No	Secure Video Connection
443	Out	Yes	No	Secure Video Connection
22	Out	Yes	No	Management Connection
8081	Out	Yes	No	Secure Video Connection
8082	Out	No	Yes	Secure Video Connection

5 Login to Your Eagle Eye Account

Using a web browser, go to login.eagleeyenetwork.com. Login using your email address and password. If you have never logged in before, you must verify your email address. Call support if you need a login.

6 Add the Bridge to your Brivo Eagle Eye Video Account

The Brivo Eagle Eye Bridge may have already been added to your account (it will appear at the bottom of the Dashboard page). If so, you can skip to the next step. If the Bridge has not been added, click the three dots in the upper-right corner and select "Add Bridge." Enter the 16-digit Attach ID on the front of this guide, and name your bridge.

7 Camera Setup

Before trying to add cameras to the Eagle Eye Bridge we strongly recommend setting up the cameras. Cameras should:

1. Be plugged in and powered on (via POE or power supply).
2. Be reset to factory default if not a new camera.
3. Be configured to use DHCP IP addresses (or have non-conflicting Static IP addresses).
4. Have secure Web GUI passwords that are not the default!

8 Connect Cameras via Ethernet

The recommended method of setup is shown in Figure 1. Eagle Eye recommends putting your camera on a physically separate network called the CamLAN. The Eagle Eye Bridge provides DHCP addresses on the CamLAN. Alternatively, cameras can be connected to the same network as the Bridge WAN. Cameras that have a valid IP address (either DHCP or static) appear in the Eagle Eye Dashboard and can be added to your Account.

9 Connect Analog Cameras (if Analog Bridge)

Use the included VGA-to-BNC cable and connect to the Bridge. BNC ends are labeled with their video input. All Analog inputs will appear as available cameras on the Dashboard. Unused inputs can be hidden from the Dashboard in the Bridge settings under the Analog tab.

10 Add Cameras to your Eagle Eye Account

Go to your Dashboard and select the + sign next to the cameras you want to add to your account. Enter the camera ONVIF username and password if needed. See manufacturer notes on next page.